

IMPORTANT TO KNOW: Ford Series & RAM



- Ford Series & RAM trucks have Removable headrests.
- Press the Side Buttons on the Plastic Guides for the Head Rest Poles.
- Lift Upwards to Remove the Head Rests.



- Could you slide the Back Cover over the Backrest
- It features Pre-Punched Holes for the Plastic Guides of the headrests.
- Slide the holes over the Plastic Guides and Hide the Hole Under the Rim of the Guides.

- ***Chevy Silverado & GMC Sierra The Head Rest is Not Easily Removable.***
- ***We've designed an Easy Installation Feature using a Zipper and a Flap.***
- ***Open the Zipper.***



(1)

1. Open the zipper at the top of our backrest (1)




(2)

2. Slide the Backrest cover, Diagonally, Over the Head Rest.



(3a)

3. At the top of the backrest, Push the Fabric tab towards Rear and Pull the Zipper Back Up. (3a + 3b)

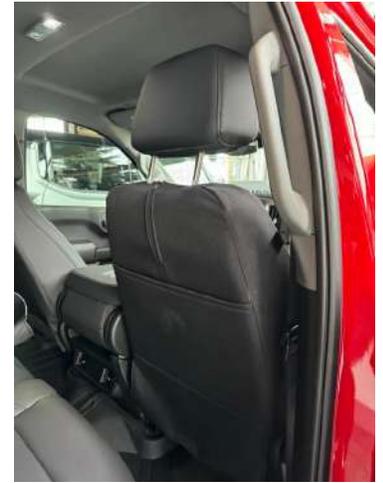


(3b)




(4a)

4. Pull the backrest cover all the way down and on the backside of the cover - Tuck it up into itself. (4a + 4b)

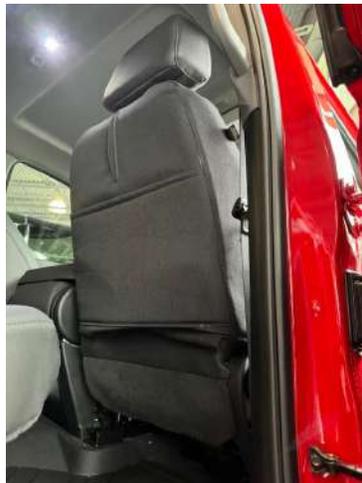

(4b)

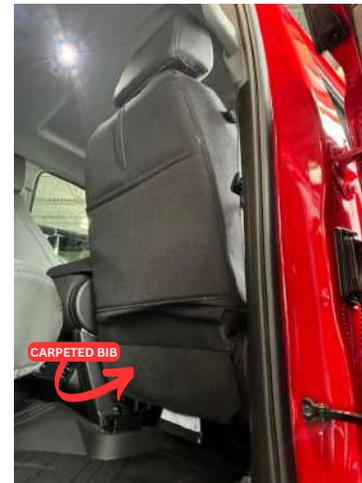

(5)

5. From the front, take the tail end of the backrest cover that has a small strip of Hook Velcro, Push the Tail-end through where the cushion and backrest meet. As you push the Velcro through, you will feel a Blocker - that is the **Carpeted Bib**. (5)



(6a)

6. Go to the rear of the seat and grab that Tail with Velcro and Stick it to the Carpeted Bib. (6a)



(6b)

6b. Look at the face of the backrest and Adjust the tension of the Velcro to suit how tight you want the backrest cover to be. (6b)

INSTALLING THE CUSHION COVER



(7a)



(7b)

7. The Front of the Cushion features a 2" Cap to Ensure the front of the Seat Cover remains secure. (7a + 7b)




(8a)



(8b)


8. Start with the Front Corner where the Plastic Side Trim of the Cushion is. (8a)

8b. Diagonally wedge the seat cover between the plastic and the seat. (8b) Pull - back and forth to easily get the cover securely behind the plastic trim.

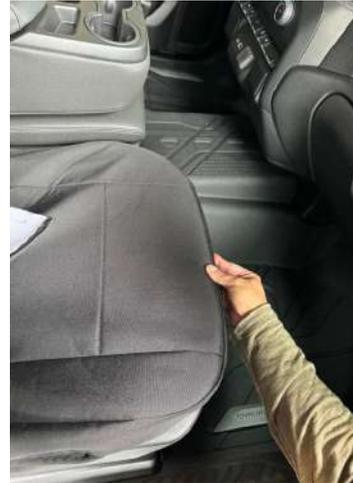

(9)

9. Next - Pull the other side of the cushion cover so the front seams are aligned with the original seam line. (9)

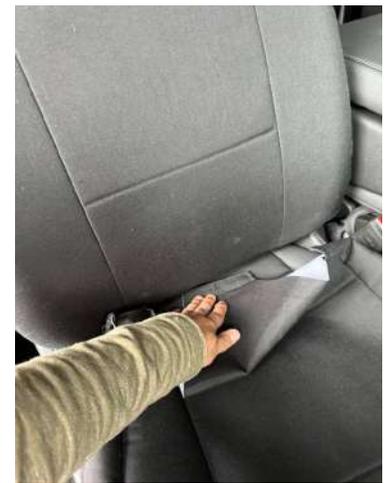

(10)

10. Push the Tail of the cushion cover, which has Velcro sewn to it - through to crack where the cushion and backrest meet. (10)



(11a)



(11b)



(12a)



(12b)

11. Go to the rear of the seat and feel for the Tail with Velcro and pull it through and attach it to the Carpeted Bib. (11a + 11b)

12. Now, take the Rear of the backrest that we tucked up into itself at the beginning and Press the bottom of the backrest onto the carpeted bib. (12a + 12b)

BUNJI ELASTIC



(13a)



(13b)

13. Pull the Left and Right sides of the Bunji Elastic - Nice and Tight - Tie New Loops and insert the "S" Hook into the loops. (13a + 13b)

The Bunji length we provide is fairly long so, you can Shorten it. This will maintain the tension of the new shortened Bunji Elastic.

- You can hide the Looped Bunji behind the bottom of the backrest cover.
- You can undo the bottom of the backrest let the bunji go behind it and Re-Attach the bottom of the backrest to the carpeted bib.

Congratulations – Your Installation is Now Complete!

If you still have any questions about installing our seat covers or installation issues, please feel free to use our [contact form](#) or give us a call at [1-888-821-1066](tel:1-888-821-1066).

